

SharePoint


Childress, Cheryl ~ ?



Baja

DR70-XR Xmoto 70cc Dirt Bike (VIN PREFIX L98B)


Engine [Image]

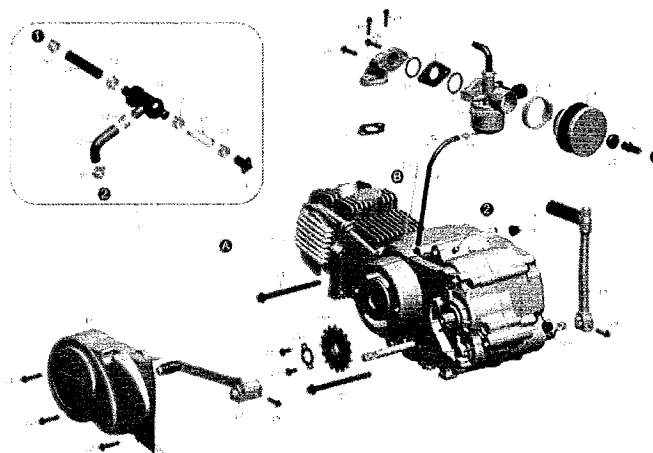

ENGINE

Item No	Part Number	Description	Qty
1	DR50X-100	MANIFOLD, AIR INTAKE	1
2	DR70X-101	GASKET, AIR INTAKE 1	1
3	DR50X-102	CARBURETOR PZL9, KF (EPA)	1
4	DR50X-103	O-RING, CARBURETOR, (RUBBER)	2
5	DR50X-104	SPACER, (COMPOSITE PLASTIC)	1
6	DR50X-105	HOSE, OVERFLOW	1
7	DR70X-106	SPRING, RUBBER HOSE	1
8	DR50X-106	CLAMP, HOSE Φ6	1
9	DR50X-107	AIR FILTER	1
10	DR50X-108	CLAMP, DUCT	1
11		HOSE, (UNAVAILABLE)	1
12		CLAMP, HOSE Φ15 (UNAVAILABLE)	2
13	DR70X-112	ENGINE	1
14	DR50X-113	COVER, CHAIN	1
15	DR50X-114	LOCKING WASHER, SPROCKET	1
16	DR70X-115	SPROCKET, ENGINE 420-16T	1
17	DR50X-116	LEVER, GEAR SHIFT	1
18	DR50X-117	LEVER, KICK START	1
19	DR50X-118	BOLT, FLANGED M6*20	4
20	DR50X-119	BOLT, FLANGED M6*25	2
21	DR50X-120	BOLT, FLANGED M6*35	1
22	DR50X-121	BOLT, FLANGED M6*30	2
23	DR50X-122	BOLT M6*8	2
24	DR50X-123	BOLT, FLANGED M8*110	1
25	DR50X-124	BOLT, FLANGED M8*105 (GB/T5787)	1
26	DR50X-125	NUT, FLANGED, LOCKING M8	2
27	DR50X-127	GROMMET	1
28	DR50X-128	AIR INTAKE PIPES	1
29		CLAMP, HOSE Φ13 (UNAVAILABLE)	4
30		CLAMP, HOSE Φ11 (UNAVAILABLE)	1
31		AIR/OIL SEPARATOR (UNAVAILABLE)	1
32		HOSE, (UNAVAILABLE)	1
33		HOSE, (UNAVAILABLE)	1
34		CAP, AIR/OIL SEPARATOR (UNAVAILABLE)	1
35		AIR/OIL SEPARATOR ASSY. (UNAVAILABLE)	1
36	DR70X-135	SPARK PLUG	1


Actuator Valve [Image]

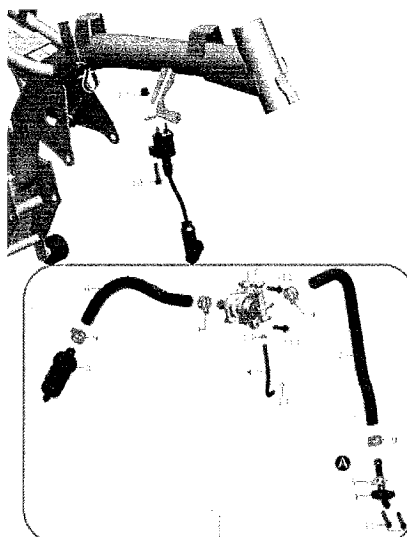

ACTUATOR VALVE

Item No	Part Number	Description	Qty
1	DR50X-136	ACTUATOR VALVE ASSY.	1
2		2 VALVE (UNAVAILABLE)	1
3		FILTER (UNAVAILABLE)	1
4		PIPE FOR AIR FITTER (UNAVAILABLE)	1
5	DR50X-140	WASHER	1
6		HOSE, INTAKE 1 (UNAVAILABLE)	1
7		HOSE, INTAKE 2 (UNAVAILABLE)	1
8		HOSE, INTAKE 3 (UNAVAILABLE)	1
9	DR50X-110	CLAMP, HOSE Φ 11	4
10	DR50X-119	BOLT, FLANGED M6*25	1
11	DR50X-118	BOLT, FLANGED M6*20	4
12	DR50X-147	NUT, FLANGED, LOCKING M6	1
13	DR70X-148	CLAMP, HOSE Φ 6	2

Exhaust [Image]

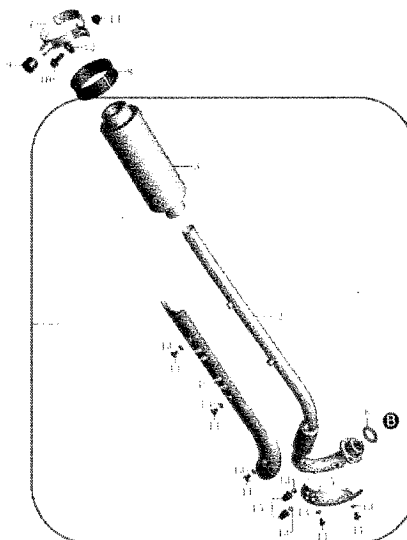


EXHAUST

Item No	Part Number	Description	Qty
	DR70X-149	EXHAUST ASSEMBLY (EPA)	1
		EXHAUST PIPE (UNAVAILABLE) (EPA)	1
		MUFFLER (UNAVAILABLE) (USFS)	1
3		MUFFLER (UNAVAILABLE)	1
4		SHIELD, EXHAUST 1 (UNAVAILABLE)	1
5		SHIELD, EXHAUST 2 (UNAVAILABLE)	1

6	DR50X-153	SEAL, EXHAUST	1
7	DR50X-154	CLAMP, DUCT, EXHAUST	1
8	DR50X-155	CUSHION, BRACKET	1
9	DR50X-156	CAP, FRAME, FRONT	1
10	DR50X-157	BOLT, FLANGED M8*20	1
11	DR50X-158	BOLT, M6*10	5
12	DR50X-159	FLAT WASHER Ø8	1
13	DR50X-160	LOCK WASHER Ø6	7
14	DR50X-125	NUT, FLANGED, LOCKING M8	1
15	DR50X-162	BOLT, M6*21	2


Handlebar [Image]

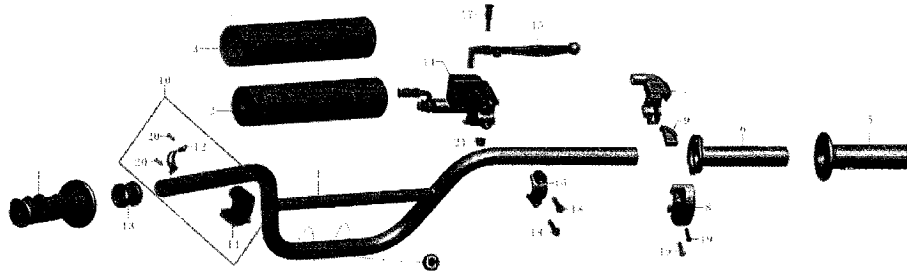

HANDLEBAR

Item No	Part Number	Description	Qty
1	DR70X-165	HANDEL BAR	1
2	DR50X-164	FOAM PADDING, CROSSBAR	1
3	DR50X-165	COVER, FOAM PADDING	1
4	DR50X-166	GRIP, LH	1
5	DR50X-167	GRIP, RH	1
6	DR50X-168	INSERT THROTTLE HANDLE	1
7	DR50X-169	HOUSING, THROTTLE, TOP	1
8	DR50X-170	HOUSING, THROTTLE, BOTTOM	1
9	DR50X-171	GUIDE, THROTTLE CABLE	1
10	DR50X-172	STOP SWITCH ASSY.	1
11		STOP SWITCH (UNAVAILABLE)	1
12		BRACKET, STOP SWITCH(UNAVAILABLE)	1
13	DR50X-174	SLEEVE, STOP SWITCH	1
14		MASTER CYLINDER, FRONT (UNAVAILABLE)	1
15	DR70X-179	LEVER, BRAKE, FRONT	1
16		BRACKET, MASTER CYLINDER, MIRROR (UNAVAILABLE)	1
17		BOLT, BRAKE LEVER (UNAVAILABLE)	1
18	DR50X-119	BOLT, FLANGED M6*25	2
19	DR50X-186	BOLT M5*16	2
20	DR50X-184	BOLT, ST3.6*12	2
21	DR50X-278	NUT, LOCKING M6	1


Front Shocks [Image]

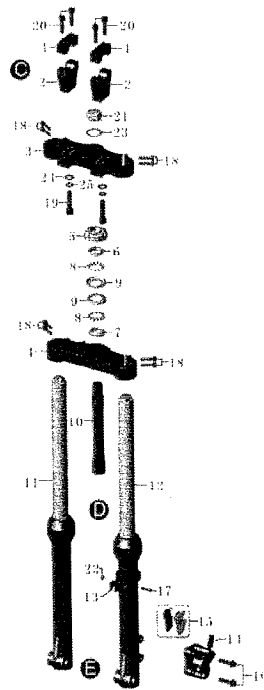

FRONT SHOCKS

Item No	Part Number	Description	Qty
1	DR70X-186	RISER, HANDLE BAR, TOP	2
2	DR70X-187	RISER, HANDLE BAR, BOTTOM	2
3	DR70X-188	TRIPLE CLAMP, TOP	1
4	DR70X-189	TRIPLE CLAMP, BOTTOM	1
5	DR50X-193	LOCKING NUT M22	1
6	DR50X-194	STOPPER, BEARING $\Phi 22.5$	1
7		STOPPER, BEARING $\Phi 24$	1
8		BEARING, STEERING STEM	2
9		RACE, BEARING	2
10	DR70X-195	STEERING STEM	1
11	DR70X-196	ADJUSTABLE INVERTED FORK, RH	1
12		ADJUSTABLE INVERTED FORK, LH	1
13	DR70X-198	BRACKET, BRAKE HOSE, BOTTOM	1
14		DISC, BRAKE, FRONT (UNAVAILABLE)	1
15		BRAKE PADS, FRONT, RH	1
16	DR50X-207	BOLT, FLANGED M8*30	2
17	DR70X-202	BOLT M5*20	1
18	DR70X-203	BOLT M6*25	8
19	DR70X-204	BOLT M10*40*1.5	2
20	DR70X-205	BOLT M8*30	4
21	DR50X-211	NUT, M22	1
22	DR70X-207	NUT, LOCKING M5	1
23	DR70X-208	FLAT WASHER $\Phi 36 \times \Phi 22.5 \times 0.5$	1
24	DR70X-209	FLAT WASHER $\Phi 10$	2
25	DR70X-210	LOCK WASHER $\Phi 10$	2

Front Rim [Image]

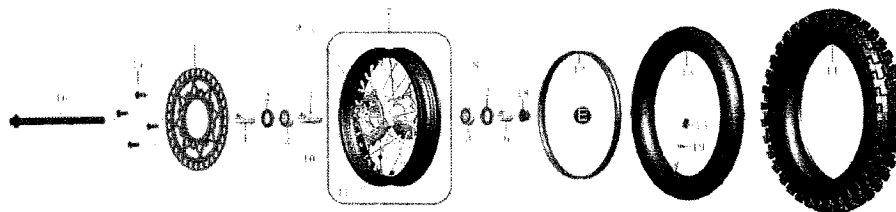


FRONT RIM

Item No	Part Number	Description	Qty
1	DR70X-211	DISC, BRAKE, REAR $\Phi 200$	1

2	DR70X-212	SEAL, DUST 35*22*6	2
3	DR70X-213	FRONT RIM BEARING 6202	2
4	DR70X-214	SPACER $\Phi 15.5 \times \Phi 22 \times 29$	1
5	DR70X-215	SPACER $\Phi 15.5 \times \Phi 22 \times 43$	1
6	DR70X-216	SPACER $\Phi 15.5 \times \Phi 22 \times 23$	1
7	DR70X-217	RIM ASSY. FRONT, 1.4*10"	1
8		RIM, FRONT 1.4*10"	1
9		HUB, FRONT	1
10	DR70X-220	SPOKES	32
11	DR50X-226	NUT, SPOKES	32
12	DR50X-227	INNER TUBE PROTECTOR BAND	1
13	DR50X-228	INNER TUBE 60/100-10	1
14	DR50X-229	TIRE, FRONT, 2.5-10	1
15	DR50X-230	CAP, AIR VALVE	1
16	DR70X-226	BOLT, FLANGED M14*215	1
17	DR70X-227	BOLT M8*20	4
18	DR70X-228	NUT, FLANGED, LOCKING M14	1
19	DR50X-233	NUT M8	1


Rear Rim [Image]

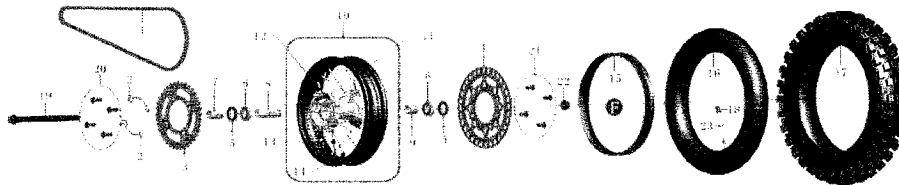

REAR RIM

Item No	Part Number	Description	Qty
1	DR70X-230	CHAIN 420-98L	1
2	DR70X-231	LOCKING WASHER, SPROCKET	2
3	DR70X-232	SPROCKET, REAR 420-41T/ $\Phi 76 \times \Phi 92$	1
4	DR70X-233	DISC, BRAKE, REAR $\Phi 200$	1
5	DR70X-234	SEAL, DUST 35*22*6	2
6	DR70X-235	FRONT RIM BEARING 6202	2
7	DR70X-236	SPACER $\Phi 15.5 \times \Phi 22 \times 39.5$	1
8	DR70X-237	SPACER $\Phi 15.5 \times \Phi 22 \times 73$	1
9	DR70X-238	SPACER $\Phi 15.2 \times \Phi 22 \times 28.5$	1
10	DR70X-239	RIM, REAR ASSY. 1.85*10"	1
11		RIM, FRONT 1.85*10"	1
12		HUB, FRONT	1
13	DR70X-242	SPOKES	32
14	DR50X-226	NUT, SPOKES	32
15	DR50X-227	INNER TUBE PROTECTOR BAND	1
16	DR50X-228	INNER TUBE 60/100-10	1
17	DR50X-229	TIRE, FRONT, 2.5-10	1
18	DR50X-230	CAP, AIR VALVE	1
19	DR70X-248	BOLT, FLANGED M14*215	1
20	DR50X-258	BOLT M8*25	4
21	DR70X-250	BOLT M8*20	4
22	DR70X-251	NUT, FLANGED, LOCKING M14	1
23	DR50X-233	NUT M8	1


Rear Swing Arm [Image]

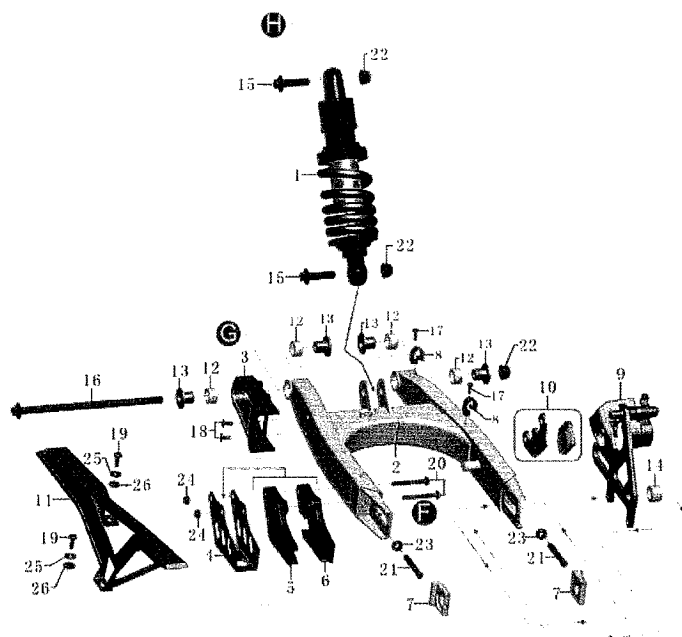

REAR SWING ARM

Item No	Part Number	Description	Qty
1	DR70X-253	REAR SHOCK L=260MM	1
2	DR70X-254	SWING ARM, REAR	1
3	DR70X-255	GUIDE, CHAIN	1
4	DR70X-256	PLATE, CHAIN GUIDE	1
5	DR70X-257	CHAIN GUIDE INSERT, RUBBER, LH	1
6		CHAIN GUIDE INSERT, RUBBER, RH	1
7	DR70X-259	ADJUSTER, WHEEL	2
8	DR70X-260	BRACKET, BRAKE HOSE	2
9		CALIPER, BRAKE, REAR(UNAVAILABLE)	1
10	DR70X-262	BRAKE PADS, REAR	1
11	DR70X-263	GUARD, CHAIN	1
12	DR70X-264	BEARING HK1612	4
13	DR70X-265	SPACER $\Phi 10.5 \times \Phi 16 \times 19$	4
14	DR70X-266	SPACER $\Phi 15.2 \times \Phi 22 \times 15$	1
15	DR50X-269	BOLT, FLANGED M10*40	2
16	DR70X-268	BOLT, FLANGED M10*210	1
17		BOLT M5*12	2
18	DR50X-158	BOLT, M6*10	2
19	DR50X-205	BOLT M6*16	2
20	DR70X-272	BOLT M6*45	2
21	DR70X-273	REAR JACK BOLTS M8*50	2
22	DR50X-275	NUT, FLANGED, LOCKING M10	3
23	DR70X-275	NUT M8	2
24	DR50X-278	NUT, LOCKING M6	2
25	DR50X-309	FLAT WASHER $\Phi 6$	2
26	DR50X-310	RUBBER WASHER $\Phi 6$	2


Frame [Image]

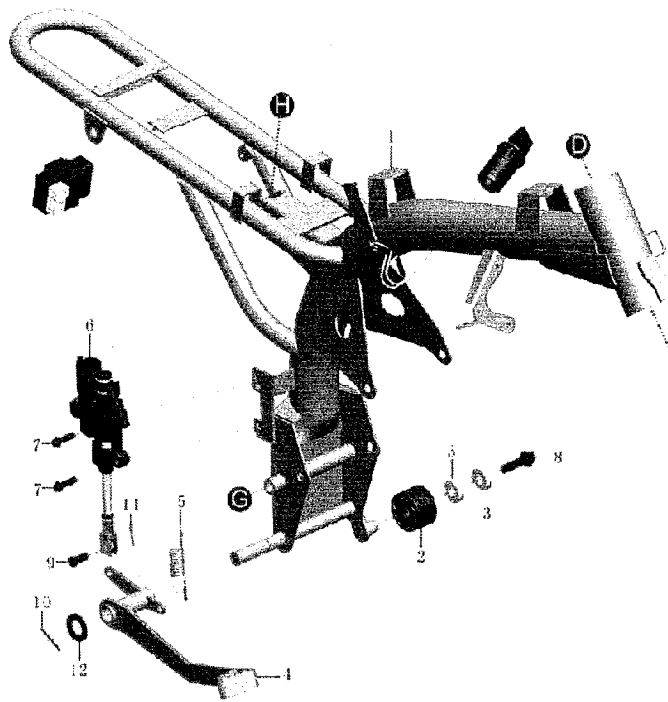

FRAME

Item No	Part Number	Description	Qty
1	DR70X-279	FRAME	1
2	DR70X-280	ROLLER, GUIDE, CHAIN	1
3	DR70X-281	BEARING 608Z	2
4	DR70X-282	LEVER, BRAKE, REAR	1
5	DR50X-282	SPRING, BRACKET, BRAKE, REAR	1
6		MASTER CYLINDER, REAR(UNAVAILABLE)	1
7	DR50X-118	BOLT, FLANGED M6*20	2
8	DR50X-207	BOLT, FLANGED M8*30	1
9		PIN, LEVER, BRAKE(UNAVAILABLE)	1
10	DR50X-284	COTTER PIN Φ3	1
11	DR50X-283	COTTER PIN Φ2	1
12	DR50X-285	FLAT WASHER Φ15	1


Footrest [Image]

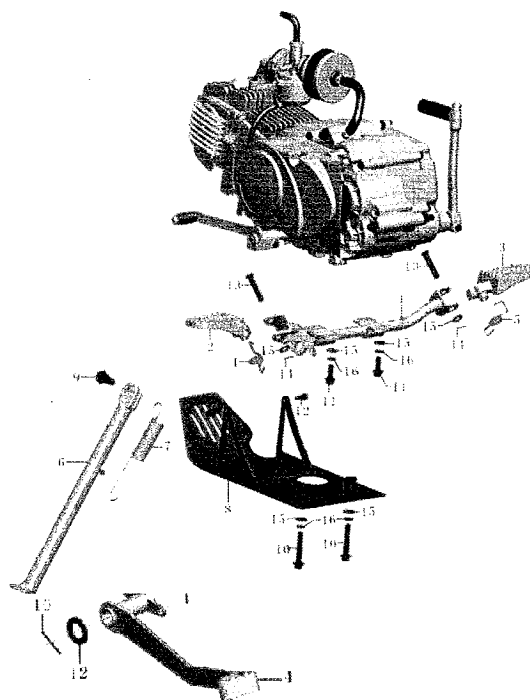

FOOTREST

Item No	Part Number	Description	Qty
1	DR70X-291	BRACKET, FOOT REST, ENGINE	1
2	DR70X-292	FOOT REST, LH	1
3	DR70X-293	FOOT REST, RH	1
4	DR70X-294	SPRING, FOOT REST, LH	1
5	DR70X-295	SPRING, FOOT REST, RH	1
6	DR70X-296	KICK STAND	1
7	DR50X-291	SPRING, KICK STAND	1
8	DR70X-298	ENGINE SKID PLATE (PROTECTOR)	1
9	DR50X-292	BOLT M10*25	1
10	DR70X-300	BOLT, FLANGED M8*45	2
11	DR50X-157	BOLT, FLANGED M8*20	2
12	DR70X-302	BOLT, FLANGED M6*16	2
13	DR50X-293	PIN, ROD $\Phi 8 \times 40$	2
14	DR50X-295	COTTER PIN	2
15	DR50X-296	FLAT WASHER $\Phi 8$	6
16	DR50X-188	LOCK WASHER $\Phi 8$	4


Fuel Tank [Image]

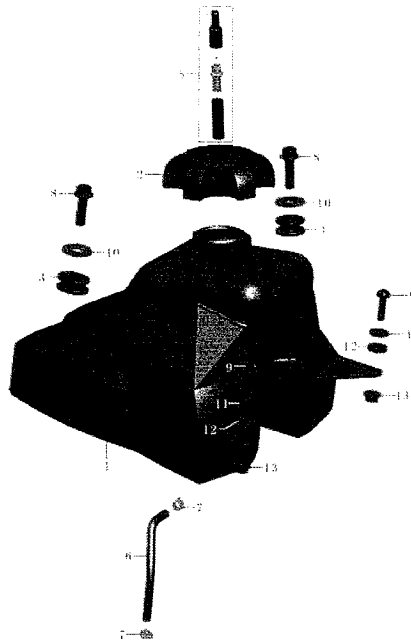

FUEL TANK

Item No	Part Number	Description	Qty
1	DR50X-297	FUEL TANK (EPA)	1
2	DR50X-299	FUEL CAP (EPA)	1
3	DR50X-301	GROMMET, OVAL	1
4	DR50X-302	GROMMET, OVAL	1
5	DR50X-303	HOSE, BREATHER	1
6	DR50X-105	HOSE, OVERFLOW 2	1
7	DR50X-106	CLAMP, HOSE $\Phi 6$	2
8	DR50X-271	BOLT, FLANGED M8*25	2
9	DR50X-307	BOLT M6*20	2
10	DR50X-308	FLAT WASHER $\Phi 8$	2
11	DR50X-309	FLAT WASHER $\Phi 6$	2
12	DR50X-310	RUBBER WASHER $\Phi 6$	2
13	DR50X-311	NUT M6	2
14		SPACER 8 X 12 X 12	1
15		SPACER 8 X 12 X 10	1


Fenders [Image]

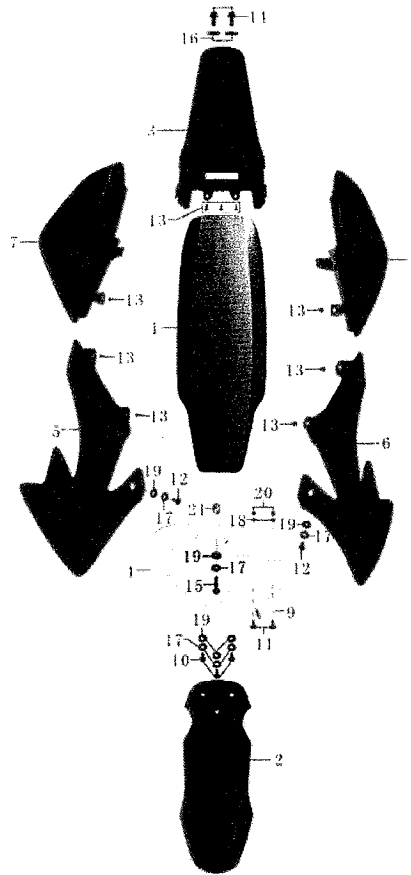

FENDERS

Item No	Part Number	Description	Qty
1	DR50X-312	SEAT	1
2	DR50X-313	FENDER, FRONT	1
3	DR50X-314	FENDER, REAR	1
4	DR70X-326	FRONT NUMBER PLATE	1
5	DR50X-316	FAIRING, FUEL TANK, RH	1
6	DR50X-317	FAIRING, FUEL TANK, LH	1
7	DR50X-318	FAIRING, REAR, RH	1
8	DR50X-319	FAIRING, REAR, LH	1
9	DR50X-320	BRACKET	1
10	DR50X-205	BOLT M6*16	3
11		BOLT M4*12	2
12	DR70X-334	BOLT M5*12	2
13	DR50X-324	BOLT, ST4.8*16	9
14	DR50X-325	BOLT, FLANGED M8*16	2
15	DR70X-337	BOLT M6*25	1
16	DR50X-308	FLAT WASHER Φ8	2
17	DR50X-309	FLAT WASHER Φ6	6
18	DR50X-328	FLAT WASHER Φ4	2
19	DR50X-310	RUBBER WASHER Φ6	6
20	DR50X-330	NUT, LOCKING M4	2
21		SPACER Φ8*Φ12*12	1


Electrical [Image]

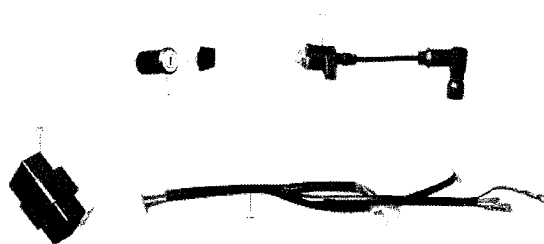

ELECTRICAL

Item No	Part Number	Description	Qty
1	DR70X-344	WIRING HARNESS	1
2	DR50X-332	IGNITION COIL	1
3	DR50X-333	CDI	1
4	DR50X-334	KEY SWITCH	1

Brake [Image]

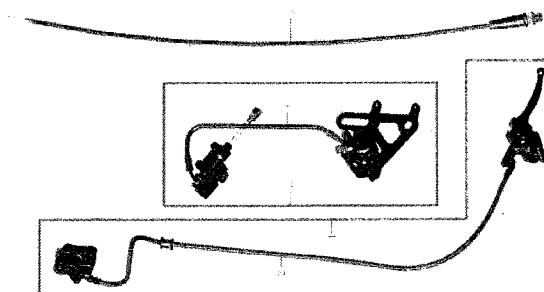

BRAKE

Item No	Part Number	Description	Qty
1	DR70X-348	BRAKE ASSY., FRONT	1
2		HOSE, BRAKE, FRONT	1
3	DR70X-350	BRAKE ASSY., REAR	1
4		HOSE, BRAKE, REAR	1
5	DR70X-352	CABLE, THROTTLE	1


TOOL KIT

Item No	Part Number	Description	Qty
1	DR70X-353	TOOL KIT	1

DECALS

Item No	Part Number	Description	Qty
1	DR70X-354	STICKER KIT 513	1

Cylinder Head [Image]

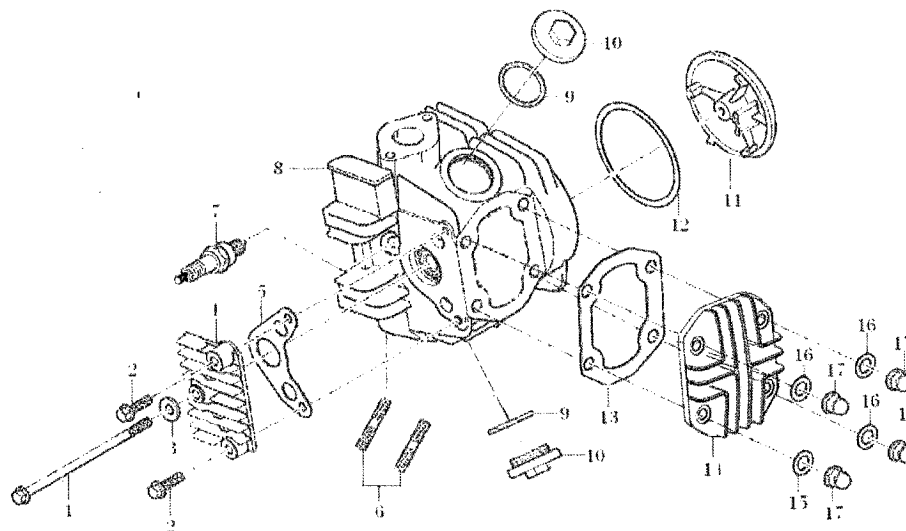


CYLINDER HEAD

Item No	Part Number	Description	Qty
1	DR50X-339	BOLT M6×110	1
2	DR50X-340	BOLT M6×20	2
3	DR50X-341	WASHER 6.5×1×12	1

4	DR50X-342	RIGHT COVER, CYLINDER HEAD	1
5	DR50X-343	GASKET,R,CYLINDER HEAD COVER	1
6	DR50X-344	BOLT M6×32	2
7	DR50X-345	SPARK PLUG	1
8	DR70X-362	CYLINDER HEAD ASSY	1
9	DR50X-347	O-RING 29.6×3.2	2
10	DR50X-348	COVER, VALVE CHAMBER	2
11	DR50X-349	LEFT COVER, CYLINDER HEAD	1
12	DR50X-350	GASKET,L,CYLINDER HEAD COVER	1
13	DR50X-351	GASKET, CYLINDER HEAD UPPER COVER	1
14	DR50X-352	UPPER COVER, CYLINDER HEAD	1
15	DR50X-353	WASHER 6.2×2×13	1
16	DR50X-354	WASHER 6.2×2×13	3
17	DR50X-355	NUT M6	4


Cylinder [Image]

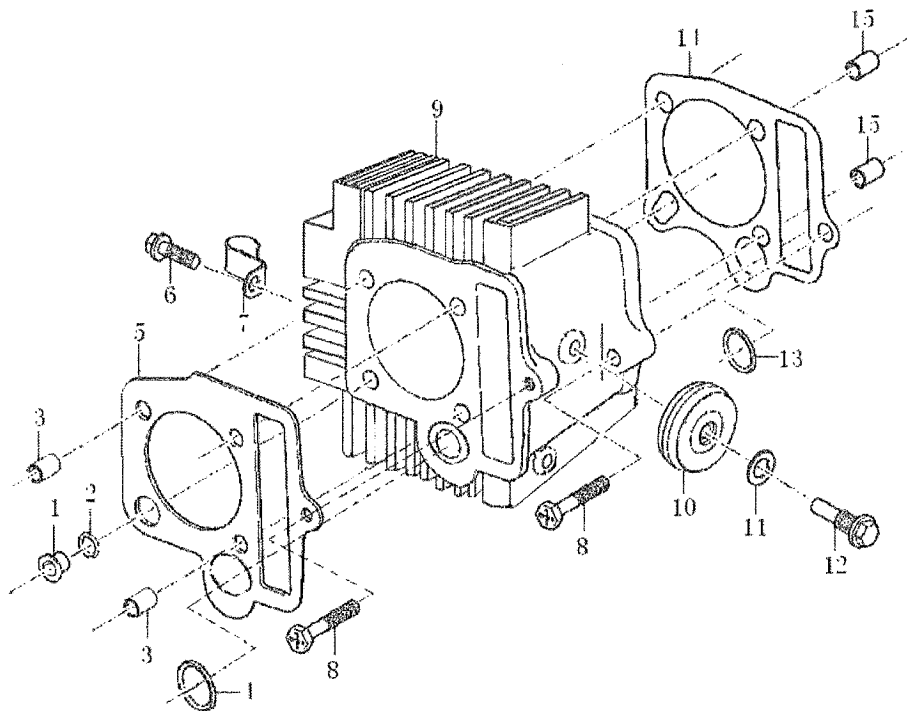

CYLINDER

Item No	Part Number	Description	Qty
1	DR50X-356	BUSH 9.5	1
2	DR50X-357	RECTANGLE RING 8×10.8×1.5	1
3	DR50X-358	PIN 8×14×6.3	2
4	DR50X-359	RECTANGLE RING 14×18.2×2.5	1
5	DR70X-376	GASKET ASSY,CYLINDER HEAD	1
6	DR50X-361	BOLT M6×16	1
7	DR50X-362	CLIP, HIGH VOLTAGE WIRE	1
8	DR50X-363	BOLT M6×23	2
9	DR70X-380	CYLINDER BLOCK ASSEMBLY	1
10	DR50X-365	GUIDE CHAIN ROLLER SET	1
11	DR50X-366	WASHER 8.5×1.5×14	1
12	DR50X-367	GUIDE CHAIN ROLLER PIN	1
13	DR50X-368	RECTANGLE RING 11.5×16×2.5	1
14	DR50X-369	GASKET,CYLINDER BLOCK	1
15	DR50X-370	PIN 8×12×6.3	2


Valves [Image]

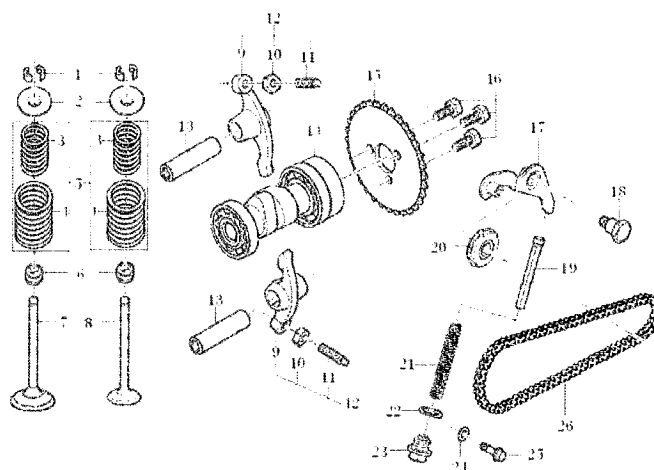

VALVES

Item No	Part Number	Description	Qty
1	DR50X-371	VALVE LOCKER	4
2	DR50X-372	SPRING SEAT	2
3	DR50X-373	VALVE INNER SPRING	2
4	DR50X-374	VALVE OUTER SPRING	2
5	DR50X-375	INNER SPRING,ASSY	2
6	DR50X-376	SEAL, VALVE STEM	2
7	DR70X-393	INTAKE VALVE	1
8	DR70X-394	EXHAUST VALVE	1
9	DR50X-379	ROCKER ARM	2
10	DR50X-380	NUT,VALVE CLEARANCE	2
11	DR50X-381	SCREW, VALVE CLEARANCE	2
12	DR50X-382	ROCKER ARM ASSEMBLY, VALVE	2
13	DR50X-383	ROCKER SHAFT	2
14	DR70X-400	GAMP SHAFT COMP	1
15	DR50X-385	TIMING DRIVEN SPROCKET	1
16	DR50X-386	BOLT M5×12	3
17	DR50X-387	CHAIN ADJUSTING SET	1
18	DR50X-388	AXLE, TENSIONER LEVER	1
19	DR50X-389	CHAIN TYHT SET	1
20	DR50X-390	PLUG OF TIGHTENER	1
21	DR50X-391	SPRING	1
22	DR50X-392	WASHER 14.5×1.5×20	1
23	DR50X-393	SEALING PLUG M14×1.5	1
24	DR50X-394	WASHER 6.2×1.5×13	1
25	DR50X-395	BOLT M6×18	1
26	DR50X-396	SPROKET CHAIN	1


Right Crankcase Cover [Image]

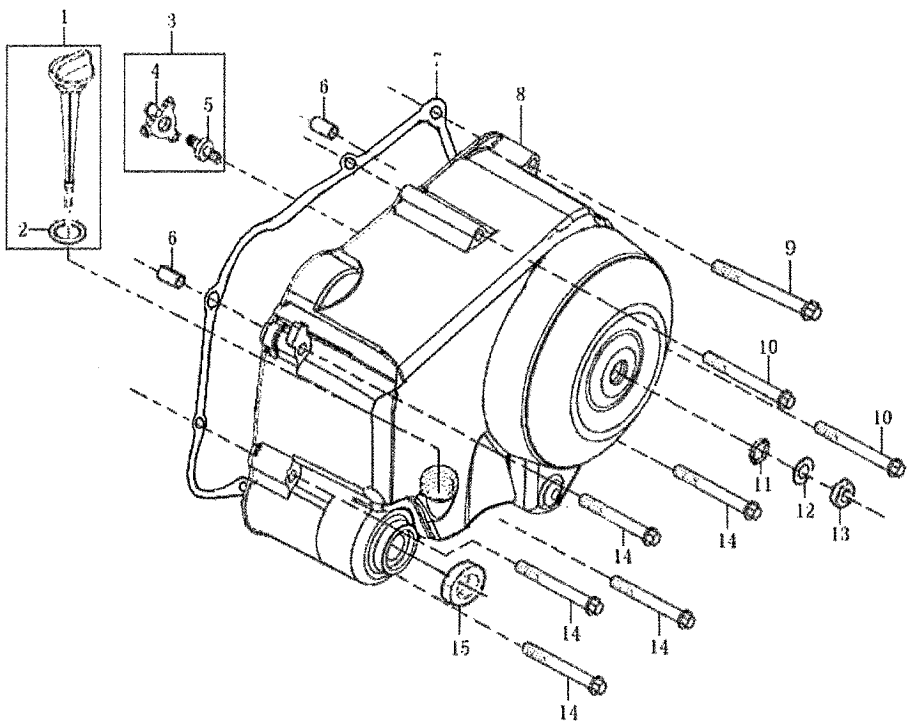

RIGHT CRANKCASE COVER

Item No	Part Number	Description	Qty
1	DR50X-397	OIL RULER ASSY	1
2	DR50X-398	O-RING 18×3	1
3	DR50X-399	CLUTCH TAPPET	1
4	DR50X-400	CLUTCH TAPPET	1
5	DR50X-401	BOLT M8	1
6	DR50X-370	PIN 8×12×6.3	2
7	DR50X-403	GASKET, R.CRANKCASE COVER	1
8	DR50X-404	COVER COMP. RIGHT CRANKCASE	1
9	DR50X-405	BOLT M6×80	1
10	DR50X-406	BOLT M6×65	2
11	DR50X-407	O-RING 8×1.8	1
12	DR50X-408	WASHER Φ8	1
13	DR50X-409	NUT M8	1
14	DR50X-410	BOLT M6×40	5
15	DR50X-411	OIL SEAL 13.8×24×5	1


Clutch [Image]

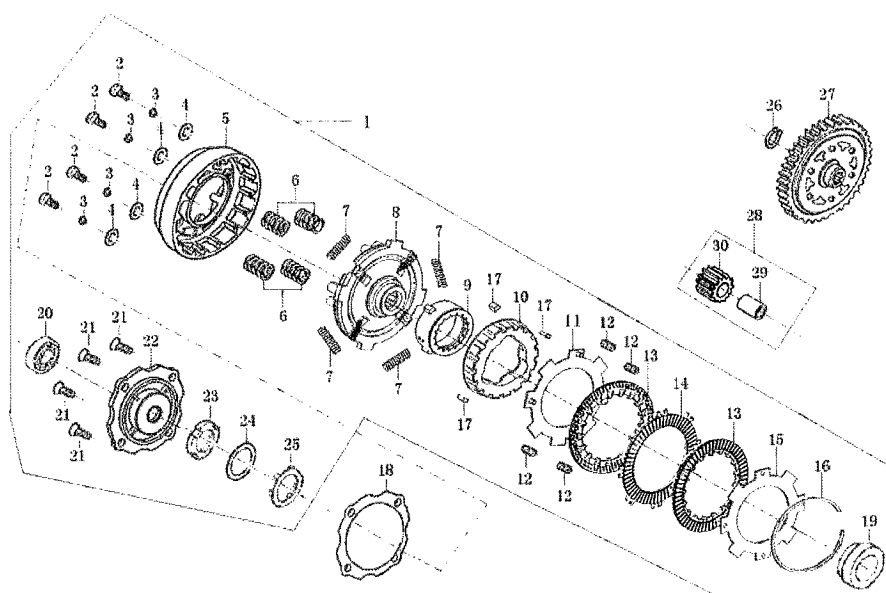

CLUTCH

Item No	Part Number	Description	Qty
1	DR50X-412	CLUTCH ASSY	1
2	DR70X-429	SCREW M5×12	4
3	DR70X-430	WASHER Φ5	4
4	DR70X-431	WASHER Φ5-140HV	4
5	DR70X-432	OUTER CASE, CLUTCH	1
6	DR70X-433	SPRING, CLUTCH	4
7	DR70X-434	ABSORBING SPRING	4
8	DR70X-435	DRIVE PLATE COMP	1
9	DR70X-436	ALIGNING SLIDING BUSH	1
10	DR70X-437	HUB, CLUTCH SLEEVE	1
11	DR70X-438	CLUTCH TOP PLATE	1
12	DR70X-439	CLUTCH CUT SPRING	4
13	DR70X-440	OUTER FRICTION DISK A	2
14	DR70X-441	DRIVE FRICTION DISK	1
15	DR70X-442	CLUTCH BELOW PLATE	1
16	DR70X-443	ELASTIC CHECK RING	1
17	DR70X-444	CLUTCH DASH POT SLIPCOVER	3
18	DR70X-445	GASKET, END COVER	1
19	DR70X-446	SLEEVE	1
20	DR70X-447	BEARING (6000)	1
21	DR70X-448	SCREW M5×12	4
22	DR70X-449	END COVER, CLUTCH	1
23	DR50X-413	LOCK NUT, CLUTCH	1
24	DR50X-414	DISH WASHER, CLUTCH	1
25	DR50X-415	STOP WASHER, CLUTCH	1
26	DR50X-416	CIRCLIP	1
27	DR50X-417	DRIVEN GEAR COMP	1
28	DR50X-418	DRIVEN GEAR	1
29	DR50X-419	AXLE SLEEVE	1
30	DR50X-420	PRIMARY DRIVE GEAR	1


Oil Pump [Image]

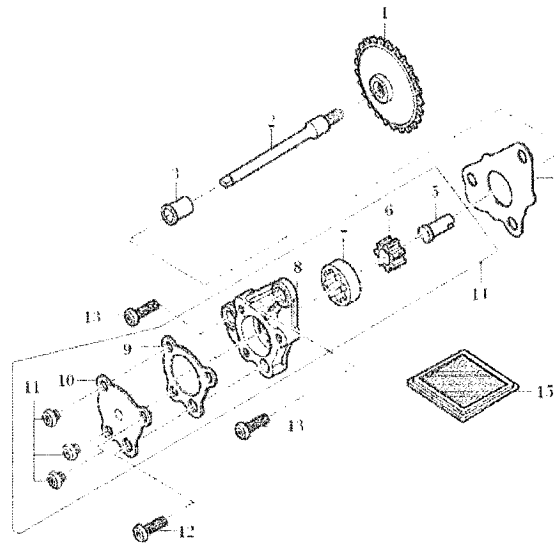

OIL PUMP

Item No	Part Number	Description	Qty
1	DR50X-421	HUB DUMP CHAIN SPROCKET, OIL PUMP	1
2	DR50X-422	OIL PUMP SPROCKET SHAFT	1
3	DR50X-423	BUSH, SPROCKET	1
4	DR50X-424	GASKET,OIL PUMP	1
5	DR70X-462	SHAFT,OIL PUMP	1
6	DR70X-463	INNER ROTOR, OIL PUMP	1
7	DR70X-464	OUTER ROTOR, OIL PUMP	1
8	DR70X-465	OIL PUMP BODY	1
9	DR70X-466	GASKET,OIL PUMP COVER	1
10	DR70X-467	OIL PUMP COVER	1
11	DR70X-468	SCREW M5x10	3
12	DR50X-425	SCREW M6x22	1
13	DR50X-426	SCREW M6x16	2
14	DR50X-427	OIL PUMP ASSY	1
15	DR50X-428	STRAINER,OIL FILTER	1

Magneto [Image]

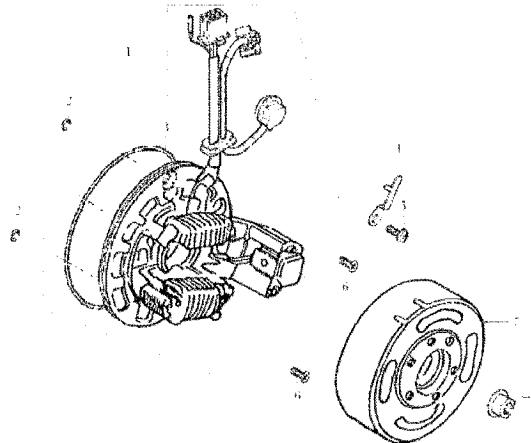

MAGNETO


Item No	Part Number	Description	Qty
1	DR50X-479	STATOR ASSY,MAGNETO	1
2	DR50X-480	O-RING 6.5x1.8	2
3	DR50X-481	O-RING 106.8x2	1
4	DR50X-482	GEARSHIFT SWITCH PRESSING PLATE	1
5	DR50X-483	SCREW M6x12	1
6	DR50X-474	SCREW M6x16	2
7	DR50X-475	ROTOR ASSY,MAGNETO	1
8	DR50X-476	NUT	1

Left Crankcase [Image]

9 DR50X-477

OIL SEAL 19×30×5


1

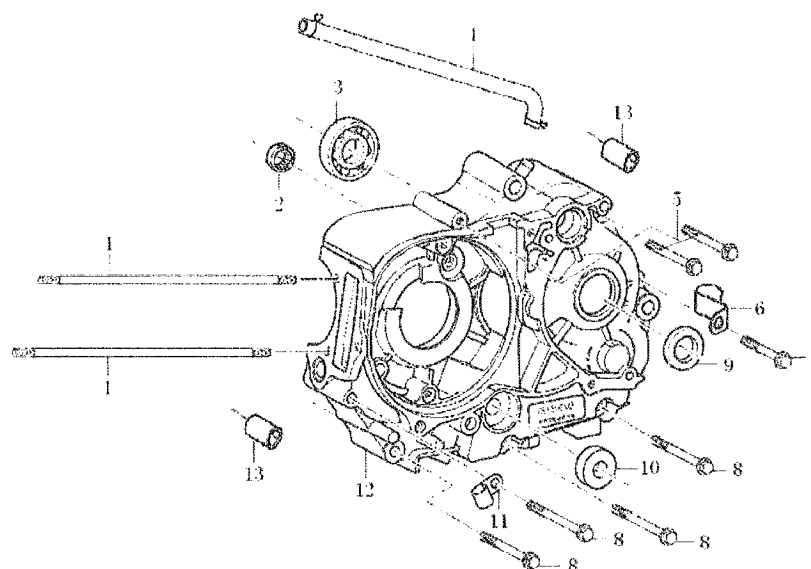

LEFT CRANKCASE

Item No	Part Number	Description	Qty
1	DR50X-429	CYLINDER STUD BOLT A	2
2	DR50X-430	BEARING(NK13.5×22×12)	1
3	DR50X-431	BEARING (6203)	1
4	DR50X-432	BREATH TUBE	1
5	DR50X-433	BOLT M6×60	2
6	DR50X-362	CLIP, HIGH VOLTAGE WIRE	1
7	DR50X-435	BOLT M6×45	1
8	DR50X-406	BOLT M6×65	4
9	DR50X-437	OIL SEAL 17×29×5	1
10	DR50X-438	OIL-SEAL 11.6×24×10	1
11	DR50X-439	CLIP, OVERFLOW PIPE	1
12	DR50X-440	LEFT CRANKCASE BLOCK	1
13	DR50X-441	PIN 10×14	2

Right Crankcase [Image]

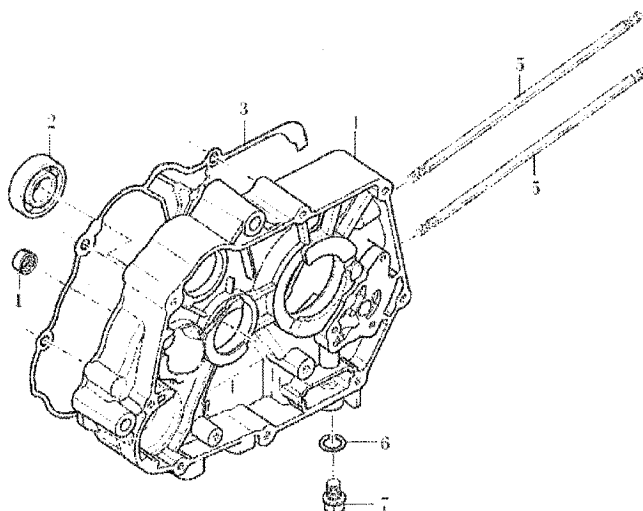


RIGHT CRANKCASE

Item No	Part Number	Description	Qty
1	DR50X-430	BEARING(NK13.5×22×12)	1
2	DR50X-431	BEARING (6203)	1
3	DR50X-444	GASKET, CRANKCASE	1
4	DR50X-445	RIGHT CRANKCASE BLOCK	1
5	DR50X-446	CYLINDER STUD BOLT B	2

	6	DR50X-447	WASHER 12.4×2×20	1
	7	DR50X-448	OIL DRAIN PLUG	1


Crankshaft [Image]

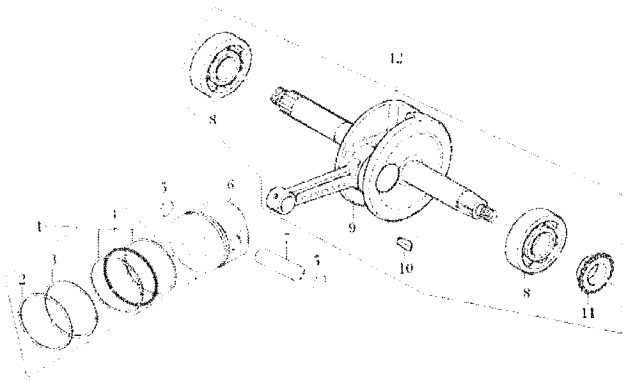

CRANKSHAFT

Item No	Part Number	Description	Qty
1	DR70X-502	PISTON RING COMP	1
2	DR70X-503	PISTON RING 1	1
3	DR70X-504	PISTON RING 2	1
4	DR70X-505	OIL RING ASSY	1
5	DR50X-453	CHECK RING, PISTON PIN	2
6	DR70X-507	PISTON	1
7	DR70X-508	PIN PISTON	1
8	DR70X-509	BEARING (6304)	2
9	DR70X-510	CONNECTING ROD COMP 3	1
10	DR70X-511	SEMICIRCULAR KEY	1
11	DR70X-512	HUB DUMP CHAIN SPROCKET	1
12	DR50X-456	CRANKSHAFT CONNECTING-ROD ASSY	1

Transmission Shafts [Image]

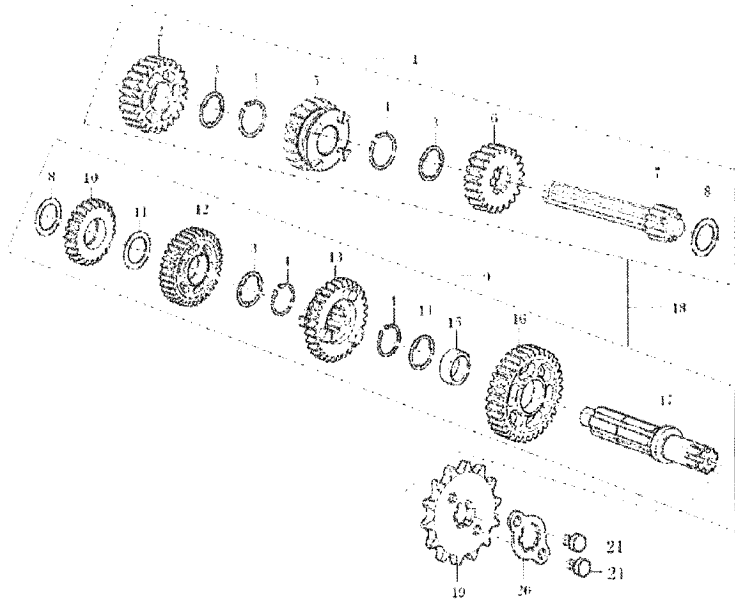


TRANSMISSION SHAFTS

Item No	Part Number	Description	Qty
1	DR70X-514	MAIN SHAFT, TRANSMISSION	1
2	DR70X-515	GEAR M-4	1
3	DR70X-516	WASHER	3
4	DR50X-416	CIRCLIP	4
5	DR70X-518	GEAR M-3	1
6	DR70X-519	GEAR M-2	1
7	DR70X-520	TRANSMISSION MAIN SHAFT	1
8	DR70X-521	WASHER 13.7×0.5×26	2

9	DR70X-522	COUTERSHAFT TRANSMISSION	1
10	DR70X-523	GEAR C-4	1
11	DR70X-524	WASHER 17.2×1.0×26	1
12	DR70X-525	GEAR C-3	1
13	DR70X-526	GEAR C-2	1
14	DR70X-527	WASHER	1
15	DR70X-528	COLLAR	1
16	DR70X-529	GEAR C-1	1
17	DR70X-530	TRANSMISSION COUNTER SHAFT	1
18	DR70X-531	TRANSMISSION MAIN. COUNTER SHAFT	1
19	DR50X-460	DRIVE SPROCKET	1
20	DR50X-461	FIXING PLATE,DRIVE SPROCKET	1
21	DR50X-462	BOLT M6×10	2


Kickstarter Shaft [Image]

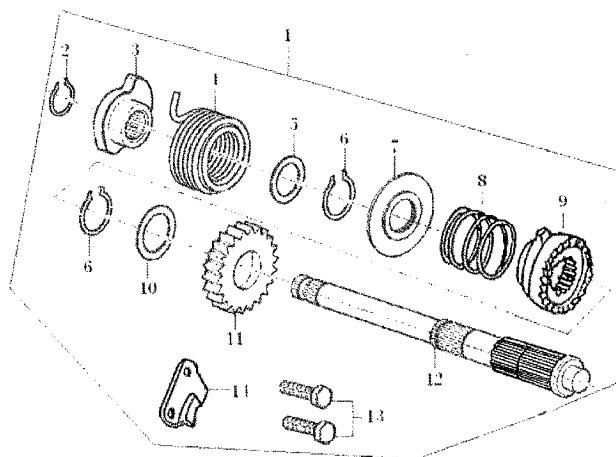

KICKSTARTER SHAFT

Item No	Part Number	Description	Qty
1	DR50X-463	KICK STARTING SHAFT ASSEMBLY	1
2	DR70X-536	CIRCLI Φ15.5×1.2×Φ19	1
3	DR70X-537	SEAT, SPRING, KICK STARTING SHAFT	1
4	DR70X-538	RETURN SPRING, KICK STARTING SHAFT	1
5	DR70X-539	WASHER 17.2×1.0×24	1
6	DR70X-540	CIRCLI Φ18.5×1.2×Φ22.1	2
7	DR70X-541	SPRING SUPPORT	1
8	DR70X-542	SPRING, KICK STARTING RATCHET WHEEL	1
9	DR70X-543	STARTING RATCHET	1
10	DR70X-544	WASHER 20.2×1.0×27	1
11	DR70X-545	GEAR, KICK STARTER	1
12	DR70X-546	PIVOT, KICK STARTING SHAFT	1
13	DR70X-547	BOLT M6×20	2
14	DR70X-548	SPACE, RATCHET WHEEL	1


Gearshift [Image]

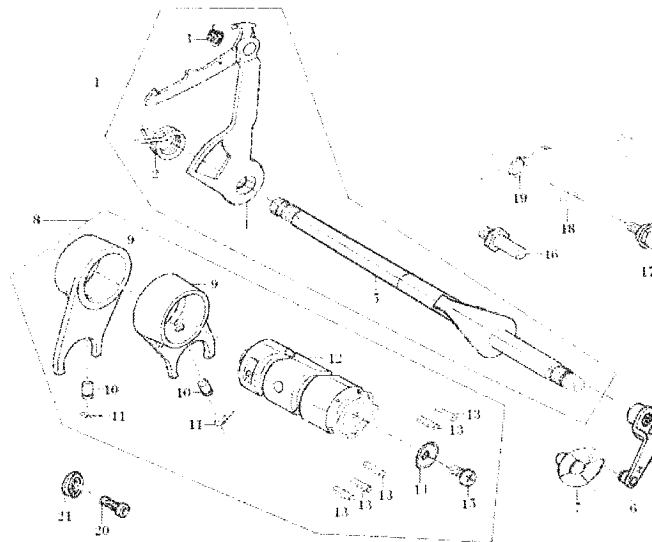

GEARSHIFT

Item No	Part Number	Description	Qty
1	DR50X-464	GEARSHIFT LEVER COMP	1
2	DR70X-550	RETURN SPRING	1
3	DR70X-551	GEARSHIFT LEVER TENSION SPRING	1
4	DR70X-552	LIMIT SCREW	1
5	DR70X-553	GEARSHIFT SHAFT COMP	1
6	DR50X-465	CONTROLLING ARM ASSEMBLY, CLUTCH	1
7	DR50X-466	CAM PLATE ASSEMBLY, CLUTCH	1
8	DR70X-556	GEARSHIFT DRUM COMP	1
9	DR70X-557	GEARSHIFT FORK	2
10	DR70X-558	GUIDE PIN	2
11	DR70X-559	CLIP, SPRING	2
12	DR70X-560	GEARSHIFT DRUM	1
13	DR70X-561	PIN 4×13	5
14	DR70X-562	SHIFT DRUM LOCATING PLATE GROUP	1
15	DR70X-563	SCREW M6×20	1
16	DR50X-473	CONTACT, GEAR INDICATION	1
17	DR50X-472	SCREW	1
18	DR50X-471	SPRING, LOCATING PLATE	1
19	DR50X-470	LOCATING PLATE ASSY	1
20	DR50X-469	BOLT FIXING PLATE	1
21	DR50X-468	BOLT, RETURN SPRING FIXING 8×11	1

Left Crankcase Cover [Image]

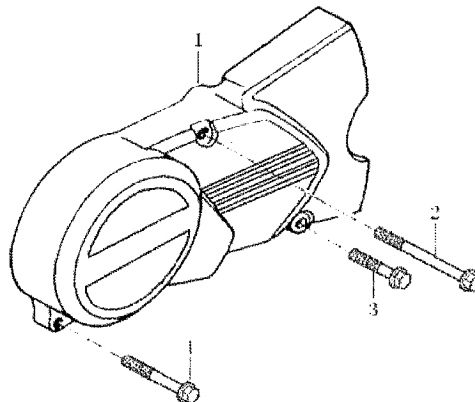

LEFT CRANKCASE COVER

Item No	Part Number	Description	Qty
1	DR90X-122	LCRANKCASE COVER FRONT PART	1
2	DR90X-123	BOLT M6×35	1
3	DR90X-124	BOLT M6×28	1

4 DR90X-125

BOLT M6x32

1